



## ALULA HARDWARE SETUP GUIDE FOR Connect+™



### Follow these steps **BEFORE POWERING UP DEVICE**

If you are not a registered dealer with Alula, please visit [www.Alula.com/newpartner](http://www.Alula.com/newpartner) to register, or call 1.888.88.Alula.

#### **You must first register the customer and device on AlulaConnect.com**

Once logged in to AlulaConnect.com, create a new account and register the Connect+ to the account using the following process:

#### **1. Create Customer Account**

Enter your customer's information such as username, password and vital information



#### **2. Register Hardware**

Add device "Friendly Name", i.e. "Smith Home"  
Enter MAC ID and CRC found on panel



#### **3. Notification Setting**


Set customer's notification preferences

#### **4. Central Station**

Add Central Station connection type, Caller ID number, and account number

# Follow instructions on reverse side **BEFORE POWERING UP DEVICE**

## 1 PLUG INTO DESIRED LOCATION TO POWER

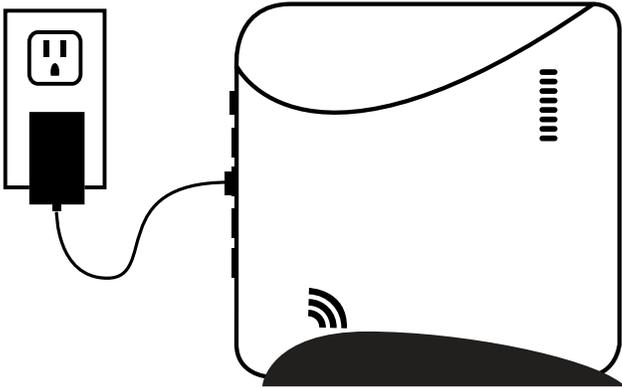


### POSSIBLE LOCATIONS:

**LIVING ROOM  
KITCHEN**

**HOME OFFICE  
CLOSET**

## 2 CONNECT CABLE OR JOIN WPS

IF ETHERNET: ATTACH ETHERNET TO PANEL & ROUTER THEN PLUG INTO DESIRED LOCATION

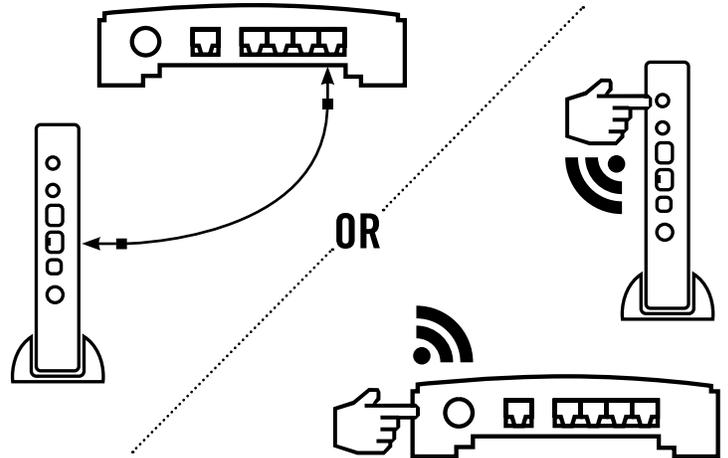

IF WIFI: PRESS AND HOLD ENROLL BUTTON ON PANEL FOR 6 SECONDS (NETWORK LED WILL FLASH) AND WPS BUTTON ON CUSTOMER'S ROUTER

IF CELLULAR: PROCEED TO STEP 3

## 3 CHECK LEDs

- POWER: GREEN BLINKS RAPIDLY
- NETWORK CONNECTIVITY: GREEN WHEN CONNECTED
- CENTRAL STATION CONNECTIVITY: GREEN WHEN CONNECTED
- PLATFORM CONNECTIVITY: GREEN WHEN CONNECTED
- ARMING STATUS: GREEN: DISARMED RED: ARMED
- TROUBLE - AMBER: SYSTEM TROUBLE IS DETECTED
- RF ACTIVITY: BLINKS RAPIDLY WHEN ANY SENSORS ARE COMMUNICATING
- SYSTEM FIRMWARE UPDATE LED: ON - NO UPDATE NEEDED  
BLINKING - UPDATE IN PROGRESS  
OFF - UPDATE/SERVER CONNECTION PENDING

## 4 DOWNLOAD APPS FOR AN INTERACTIVE EXPERIENCE

